


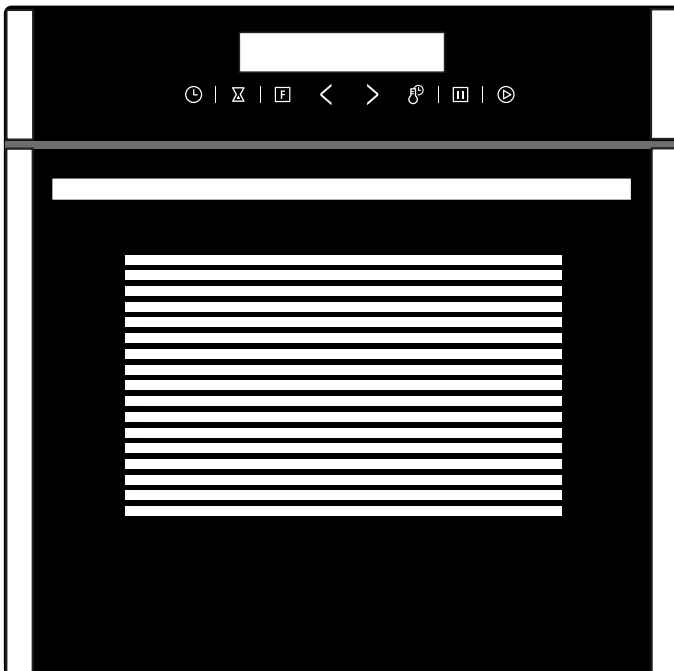

IKA-65DTE42102

Built-In Electric Oven User Manual



ACKNOWLEDGMENT

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using the product are familiar with these instructions as well.

WARNING

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. This is completely normal, if it does occur, you merely have wait for the smell to clear before putting food into the oven.
- The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass of the oven.
- This can scratch the surface and may result in permanent damage to the glass.
- During use, the appliance becomes very hot.
- Care should be taken to avoid touching heating elements inside the oven.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- During pyrolytic cleaning, accessible parts may become hotter than normal. Young children should be kept away.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.

SAFETY HINTS

- Do not use harsh abrasive cleaner or sharp metal scrapers to clean the oven door glass since they can damp hands or feet.
- For oven: Oven door should not be opened often during the cooking period.
- The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
- When the door or drawer of oven is open do not leave anything on it, you may unbalance your appliance or break the door.
- Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
- If you will not use the appliance for a long time, it is advised to plug it off.
- If the supply cord is damaged, it must be replaced by qualified persons in order to avoid a hazard.
- Excess spillage must be removed before cleaning and shall specify which utensils can be left in the oven during cleaning.
- Only use the temperature probe recommended for the oven.
- A steam cleaner is not to be used.

FITTING THE OVEN INTO THE KITCHEN UNIT

Fit the oven into the space provided in the kitchen unit; it may be fitted underneath a work top or into an upright cupboard. Fix the oven in position by screwing into place, using the two fixing holes in the frame. To locate the fixing holes, open the oven door and look inside. To allow adequate ventilation, the measurements and distances adhered to when fixing the oven.

IMPORTANT


If the oven is to work properly, the kitchen housing must be suitable. The panels of the kitchen unit that are next to the oven must be made of a heat resistant material. Ensure that the glues of units that are made of veneered wood can withstand temperatures of at least 120°C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit, once the oven has been lodged inside the units, electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The hob must have a rear gap of at least 45 mm.







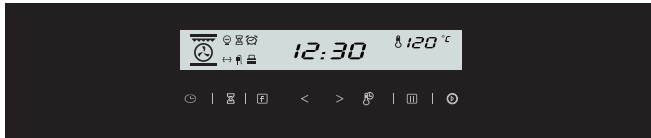


DECLARATION OF COMPLIANCE

When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.



PRODUCT DESCRIPTION






Symbol	Function description
	Oven Lamp: which enables the user to observe the progress of cooking without opening the door.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food, (without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc.
	Bottom heat: A concealed element in the bottom of the oven provides a more concentrative heat to the base of food without browning. This is ideal for slow cooking dishes such as casseroles, stews, pastries and pizzas where a crispy base is desired. The temperature can be set within the range of 60-120°C. The default temperature is 60°C.
	Conventional cooking: The top and bottom work together to provide convectional cooking. The temperature can be set within the range of 50-250°C. The default temperature is 220°C. This is optional function that can be work with rotisserie motor.
	Convention with fan: Combination of the fan and both heating element provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature. The temperature can be set within the range of 50-250°C. The default temperature is 220°C.
	Radiant grilling: The inner grill element switches on and off to maintain temperature. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. This is optional function that can be work with rotisserie motor.
	Double grilling: The inside radiant element and top element are working. The temperature can be set within the range of 180-240°C. The default temperature is 210°C.
	Double grilling with fan: The inside radiant element and top element are working with fan. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. This is optional function that can be work with rotisserie motor.
	Convection: An element around the convection fan provides an additional source of heat for convection style cooking. In convection mode the fan automatically comes on to improve air circulation within the oven and creates an even heat for cooking. The temperature can be set within the range of 50-240°C. The default temperature is 180°C.

OPERATION INSTRUCTIONS




1. Clock Setting

After connecting the unit to the power, the symbols 00:00 will be visible on the display.

- 1> Press "", the hour figures will flash.
- 2> Press "<>" to adjust the hour figures, (Time should be within 0--23).
- 3> Press "", the minutes will flash.
- 4> Press "<>" to adjust the minutes setting, (time should be within 0-59).
- 5> Press " " to finish the clock settings. ":" will flash, and the time will be illuminated.

Note: The clock is 24 hours. After connected to the mains power, the clock will untime.

2. Function Setting

- 1> Press " " to choose the cooking function you require .The related indicator will illuminated .
- 2> Press "<>" to adjust the temperature.
- 3> Press " " to confirm the start of cooking. The corresponding icon for temperature"°C"will be on.
- 4> If step 2 is ignored, Press " " to confirm the start of cooking. and the default time is 9 hours, the default temperature will display on the LCD.

NOTE:

1>The step quantities for the adjustment time of the coding switch are as follow:



0-0:30min: step 1 minute 0:30--9:00hour :step 5 minutes

2>The step quantities for the adjustment of temperature is 5°C, and "" "" can not adjust the temperature.

3>Press "<>" to adjust the cooking time when cooking begins. Then press " " to start cooking.

If " " not pressed within 3 seconds,the oven will revert back to the previous time to continue cooking.

4>Press "<>" to adjust the temperature when cooking begins.The related indicator will be illuminated.

Then press " " to start cooking. If " " not pressed in 3seconds, the oven will revert back to the previous temperatue to continue cooking.

3.Lamp Setting

1> Press "<>" to select the relevant function, then the corresponding icon will be on.

2> Press " " button to start cooking. Lamp icon " " "*" : "will flash.




4.Inquiring function



During cooking process, you can use inquiring function, after 3 seconds return to the current working state.

1> During cooking mode, press " " button to see the current time.

2> If the clock was set, press " "button to ask for cooking time.

5. Child lock function

To Lock : press " " and " " simultaneously for 3 seconds, there will be a long "beeping" sound indicating the children-lock is on and the " " will be illuminated.

Lock quitting : press " " and " " simultaneously for 3 seconds, there will be a long "beeping" sound indicating the child-lock is released.

Note: During working mode, if you want to stop cooking,press stop button quickly. Do not need to long pressing on stop button,it is invalid.

6. Reminder Function:

The oven has 9 hours reminder, this function will help to remind you to start cooking in a certain time from 1 minute to 9 hours. Only when oven in standby mode, the reminder can be set. Follow below to set the reminder:

- 1> Press reminder setting button "🕒";
- 2> Press "<>" to set the hour time of reminder. (Time should be within 0--9).
- 3> Press reminder setting button "🕒" again;
- 4> Press "<>" to set minute time of reminder. (Time should be within 0--59).
- 5> Press "▶" to confirm setting. ":" will be flash and the indicator for reminder "🕒" will light. The time counts down.

Note: The oven buzzer will sound for 10 times after the time back to the zero hour. "🕒" symbol disappears on the screen to remind you to start cooking. You can cancel the reminder during setting by pressing the stop button; After the reminder has been set, you can cancel it by pressing stop button twice.

7. Start/Pause/Cancel Function

- 1> If the cooking time has been set, press "▶" to start cooking. If the cooking is paused, press "▶" to resume cooking.
- 2> During cooking process, press "⏸" once to pause the cooking. Press "⏸" twice to cancel the cooking.

8. Energy-Saving Function

- 1> During in waiting state and reminding state, press "▶" for three seconds, the LED display will go off and set to energy-saving mode.
- 2> If no operation in 10 minutes under waiting state, the LED display will go off and go into energy-saving mode.
- 3> Under the energy-saving mode, press any key or rotate any encoder can quit the energy-saving mode.

9. Pyrolytic Function(only some modles)

This function allows you to clean thoroughly the oven cavity.

- 1> Press "<>" to select the pyrolytic function. LED will display "PYA".
 - 2> Press "▶" to confirm the cooking. And the default time is 2 hours, "PYA" will display on the LED.
 - 3> Press "<>" to change the pyrolytic time. There have two levers time can be selected "1:30 or 2:00".
- Note: A) When the oven door is not closed, press start button will be invalid, LED display "DOOR", "PYA."
B) When the oven center temperature is higher than 200°C, Press cancel button can return to waiting state directly and the oven center temperature is higher than 300°C, press start button, LED display "COOL".
C) When open the door in normal working condition, the relay for heater will stop working, LED display "DOOR", the buzzer will beep continuously until the door closed or press the cancel button.

D)When the pyrolytic function finished working and oven center temperature is lower than 300°C. LED display will go off.

E)Before activating the pyrolytic cleaning function, remove any excessive spillage and make sure that oven is empty. Do not leave anything inside it(e.g. pans, baking tray, dripping pan, slider bracket etc.) as this could heavily damage them.

10. Meat probe function:

1> In waiting state, insert the meat probe, the LED will display "PROB" and the icon "🍖" will light.

2> Press "<>" to choose function you need. The related indicator will illuminated.

Functional sequence diagram: . Press "▶" to confirm function setting.

3> Press "<>" to adjust the temperature. Press "▶" to confirm temperature probe.

The small LED display the temperature and the big LED display "PROB".

4>The buzzer will sound five times when cooking finish. The setting temperature lights when the setting temperatures arrives. If the meat probe pulled out, it will turn back to waiting state and the time displays.

Note: A). The range of the temperature is 50-150 degrees. B).During in probe function, the cooking time can not be set. C) During cooking process,press stop button once, it will stop cooking, LED flash; Press stop button again, cancel the current cooking. D)Before insert or pull out the meat probe from the oven,it will cancel all the program. E)If the display shows "Er-3" after the programme has been started, it means that the temperature sensor short circuit. Please check the sensor carefully by authorized.

11. Note

1>The oven lamp will be on for all functions.(except pyrolytic function)

 
2> Once the cooking programme has been set and the "▶" button is not pressed within 5 minutes, the current time will be displayed or turn back to waiting state. The setting program will be invalid.

3>The buzzer sounds when effectively pressed, if not effectively pressed there will be no response.


4> The buzzer will sound five times to remind you when cooking has finished.

ACCESSORIES


Meat probe : Before using, insert the probe into the center of the thickest portion of meat or into the inner thigh or breast of poultry, away from fat or bone. Place food in oven and connect the meat probe. Keep probe as far away from heat source as possible. Close oven door.



 Wire shelf : For grill .dishes, cake pan with items for roasting and grilling.




 Universal pan: For cooking large quantities of food such as moist cakes, pastries, frozen food etc,or for collecting fat/ spillage and meat juices.




SHELF PLACEMENT WARNING:

To ensure the oven shelves operate safely, correct placement of the shelves between the side rails is imperative. This will ensure that during careful removal of the shelf or tray, hot food items should not slide out.

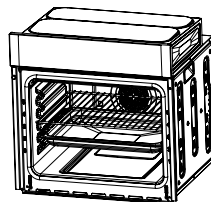

USE OF ROTISSERIE ACCESSORIES

The rotisserie works in combination with the grill element to heat the food equally. At the same time, it can guarantee the nutrition of the food.

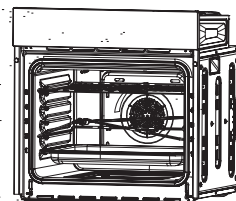


BULB REPLACEMENT

The bulb in the light is a special bulb, and has high temperature resistance (240V~25W).


For replacement, proceed as follows:

- 1>.Disconnect power from the mains outlet or switch off the circuit breaker of the unit's mains outlet.
- 2>.Unscrew the covering glass and replace the bulb with a new one of the same type.
- 3>.Screw the covering glass back in place.

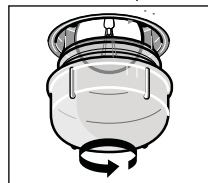


SECURING THE OVEN TO THE CABINET


1. Fit oven into the cabinet recess.
2. Open the oven door.
3. Secure the oven to the kitchen cabinet with two distance holders "A" which fit the holes in the oven frame and fit the two wood screws "B".

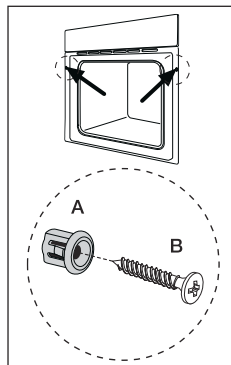

CONNECTION OF THE OVEN

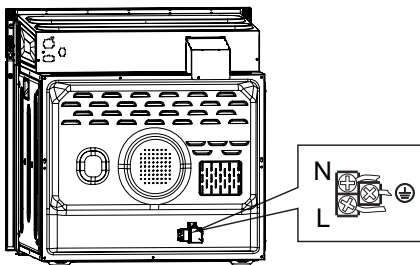

INSTALLATION

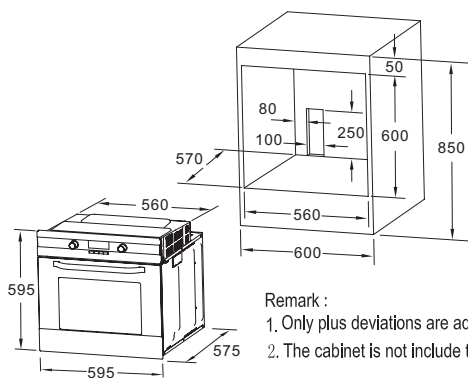

NOTE: The number of accessories included depends on the particular appliance purchased.

